

## PAIRING SHADE TO THE REMOTE

1. For a multi-channel remote, select channel first (Do not select Channel 0).
2. **Press & hold** the **Setting Button** (Figure 1) on the motor end until the shade jogs once; let go and you'll hear a long beep.
3. Quickly press the **UP** button; shade will jog once and beep 3 times.

*Note: Once motor jogs, you must press UP within 20 seconds.*

## UN-PAIRING SHADE FROM THE REMOTE/CHANNEL

Follow "PAIRING THE SHADE..." steps, but press the **DOWN** button instead.

## REVERSING THE ROLL DIRECTION

If for some reason shade direction is reversed, **Press & hold** the **Setting Button** (Figure 1) on the shade motor end until the shade **jogs 3 times**.

## REORGANIZING SHADES ON MULTI-CHANNEL REMOTE

Remember that the programming (stop limits) for each shade is saved in the motors, not the remote. So whatever changes you want can be accomplished.

- Moving a shade from one channel to another (see below)

Contact Customer Service for assistance/instructions on:

- Moving a group of shades from one channel to another
- Copying programming from one remote to another

## MOVING A SHADE FROM ONE CHANNEL TO ANOTHER

The simplest way to move a shade (and its stop limits) from one channel to another is by un-pairing and pairing the shade to the remote.

**Example:** *Left and right shades in dining room are on separate channels, but you want them to move together.*

Channel 1: LEFT shade	Channel 2: RIGHT shade
-----------------------	------------------------

1. Select channel 2 and un-pair the right shade.
2. Then select channel 1 and pair the right shade to this channel.

Channel 1: LEFT <b>and RIGHT shades</b>	Channel 2: <del>RIGHT shade</del>
---	-----------------------------------

Now the left and right shades are on the channel 1 and will move together.

Please contact Customer Service with any question or concern:

e-mail: **inspired@prodesignllc.net**  
 text: **330-294-9878**  
 call: **888-482-4082**



# USER MANUAL REMOTE CONTROL SHADES

PLEASE KEEP THIS MANUAL EVEN AFTER YOUR SHADES ARE INSTALLED AND OPERATING CORRECTLY. IT CONTAINS IMPORTANT INFORMATION WHICH MAY BE USEFUL IF YOUR SHADES NEED TO BE RE-PROGRAMMED IN THE FUTURE.

## INTRODUCTION


Thank you for your purchase of motorized shades. With careful use, your shades will provide many years of trouble-free operation. Please read the following instructions to familiarize yourself with the operation and maintenance of your shades.

## CHARGING THE MOTOR BATTERY

The shade battery is inside the motor, encased in the shade tube.

Ensure that the battery is fully charged before installing the shade:

- Insert the charger into the charging port on the end of the motor tube (Figure 1), and plug the other end into a standard outlet.
- When the LED on the motor head changes from red to green, the motor is fully charged.

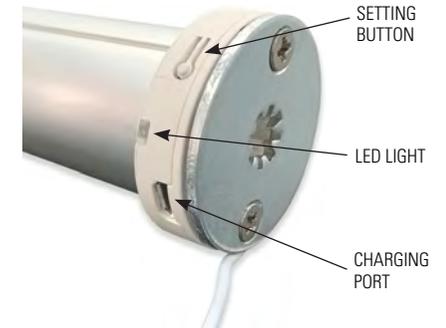


**Figure 1: Motor End**

If the motor battery needs to be charged, it will beep 10 times when you press any button on the remote.

## PREPARING THE REMOTE

Remove the panel on the back of the remote and pull out the insulating paper tab used to protect it during shipment/storage (Figure 2).

When you press a button on the remote, you will see blue LED backlight in between the buttons.

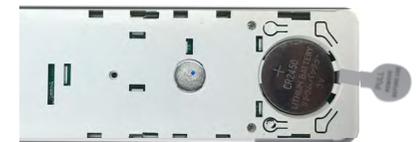

**Figure 2: Remote with battery cover removed**

## SINGLE-CHANNEL REMOTE

- Press (and release) the Up or Down button and the shade will move to the upper or lower stop limit set by the factory.
- Press (and release) the Stop button at any time while the shade is raising or lowering to stop it at that point.

## MULTI-CHANNEL REMOTE

Multi-channel remotes are used to control several shades independently with just one remote.

- The remote has 15 channels that can be programmed.
- A single shade (or shade group) will be pre-programmed to operate on a specific channel, as ordered.
- Channel 0 is always the group channel; it will operate all shades at once. It cannot be programmed.
- Press the < or > button to select a channel, and operate shade(s) on that channel with Up, Down and Stop buttons.

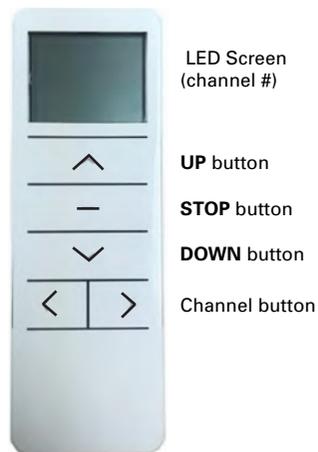


Figure 3: Multi-channel remote

## CHANGING THE REMOTE BATTERY

If the blue LED backlight between the remote buttons doesn't show when you press Up, Down or Stop, it is time to replace the battery.

- The remote should operate your shades from a distance of up to 100 feet, but low remote battery power can shorten this distance.
- Sometimes there is enough power to display a channel number on the LED screen of a multi-channel remote, but not enough to signal the motor and operate the shade.

The remote uses a CR2450 battery, available at most hardware or general stores.

## SETTING MIDDLE STOP LIMIT

This motor also has a middle stop position capability. Setting this limit is left to the customer; it's not pre-programmed at the factory.

TO SET OR CHANGE THE **MIDDLE STOP** LIMIT:

1. Move the shade to the desired middle stop limit.
2. **Press & hold STOP** button for 5 seconds\* until the motor jogs once and beeps once. A "jog" is a quick, small up-and-down movement.
3. To confirm that you've set this limit, move the shade to another position. Then while shade is not moving, press the STOP button and it should move to the middle limit.

\*If the stop button is held for 10 seconds or more, the remote locks. To unlock the remote, press and hold the stop button for 20 seconds. The remote is unlocked when the blue LED backlight flashes.

## CHANGING UPPER AND LOWER STOP LIMITS

Your shade has been pre-programmed at the factory with stop limits, but you may need to adjust them after installation.

*NOTE: When the motor is in "program mode" it will only move in small steps. To move the shade more quickly, **press & hold** the UP or DOWN button until the shade continues moving.*

TO CHANGE THE **UPPER STOP** LIMIT:

1. **Press UP** to move the shade to the current pre-set upper stop limit.
2. **Press & hold UP&STOP** buttons together until the motor jogs once, then beeps 2 times. A "jog" is a quick, small up-and-down movement.
3. Move the shade to the desired upper stop limit.
4. **Press & hold UP&STOP** buttons together until the motor jogs 2 times and beeps once.

TO CHANGE THE **LOWER STOP** LIMIT:

1. **Press DOWN** to move the shade to the current pre-set lower stop limit.
2. **Press & hold DOWN&STOP** together until the motor jogs once, then beeps 2 times.
3. Move the shade to the desired lower stop limit.
4. **Press & hold DOWN&STOP** buttons together until the motor jogs 2 times and beeps once.

## RESETTING THE SHADE MOTOR

If you need to remove all shade stop limits and start over, follow these steps:

1. **Press & hold** the **Setting Button** (Figure 1) on the shade motor end until the **shade jogs 4 times then beeps 4 times**. This removes all programming.  
*NOTE: There is a longer pause between the 2nd and 3rd jogs.*
2. Pair the shade to the motor (directions on next page)
3. Set upper and lower limits:

*NOTE: The motor is in "program mode" it will only move in small steps. To move the shade more quickly, **press & hold** the UP or DOWN button until the shade continues moving.*

- To set the upper limit, move shade to the desired upper stop position.
    - **Press & hold UP&STOP** buttons together until the motor jogs 2 times and beeps once. *You've now set the upper limit.*
  - To set the lower limit, move shade to the desired lower stop position.
    - **Press & hold DOWN&STOP** buttons together until the motor jogs 2 times and beeps once. *You've now set the lower limit.*
4. If desired, follow instructions for "Setting Middle Stop Limit."