
INSPIRED SHADES™ COLLECTION LIMITED WARRANTIES

Limited No Questions Asked Warranty

The Pro Design LLC Limited “No Questions Asked” Warranty is offered exclusively to Budget Blinds’ customers purchasing products from the Inspired Shades Collections only. This warranty allows a one-time complimentary replacement or repair should a shade become damaged or inoperable after the initial installation.

This warranty is valid for five years from the original date of purchase. Replacement or repair will be at Pro Design LLC’s discretion.

The replacement shade will be made to the same size and specifications as the original shade. The replacement shade must be ordered in the same pattern and color. If the original pattern or color is not available, the shade will be replaced with the closest available option. If a shade is replaced, there may be variations in the color or texture of the original and replaced shades.

This warranty does not cover motors or batteries for motorized shades. This warranty does not cover trip charges or labor charges for removal or installation.

This warranty is provided to the original purchaser only with proof of purchase and does not cover damage caused by removal, storage or reinstallation of the shades. This warranty is only available through Budget Blinds franchisees.

Limited Lifetime Warranty

This product is warranted against defects in materials and workmanship, provided that:

1. The product was installed according to the product instructions.
2. Pro Design LLC recommendations were followed regarding limitations and specifications of the product.

Pro Design LLC reserves the right to determine if your shade warrants a repair or partial replacement of any parts. If necessary, Pro Design LLC will replace your shade with a new shade of equal or superior value. This shall be your sole remedy under this warranty.

This Limited Lifetime Warranty excludes all motors, controls and accessories that are warranted for only a period of five years from the date of purchase. Failure to follow the proper installation, charging and use instructions will invalidate the warranty for motors, remotes, wands and hubs.

This Limited Lifetime Warranty applies only to the original retail purchaser with proof of purchase.

This Limited Lifetime Warranty does not cover the removal or installation of original or replacement shades. This Limited Lifetime Warranty does not cover damage or defects caused by, or resulting from improper maintenance, neglect or improper use, wear and tear, abuse, neglect, accidents, alteration, commercial use, installation, removal or reinstallation or exposure to excessive moisture.

Your Rights Under State Law

These warranties give you specific legal rights. You may also have other rights which may vary from State to State. In no event shall Pro Design LLC be liable for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. These warranties are exclusive and in lieu of all other obligations, liabilities, disclaimers or warranties.

If you have any questions or concerns, please contact Customer Service at **1-888-482-4082** or **inspired@prodesignllc.net**.



INSTALLATION INSTRUCTIONS CORDLESS ROLLER SHADES

THANK YOU FOR PURCHASING YOUR CUSTOM ROLLER SHADES. WITH PROPER INSTALLATION YOUR SHADES SHOULD LOOK BEAUTIFUL AND PROVIDE YEARS OF SERVICE. PLEASE CHECK ALL PARTS AND READ THESE INSTRUCTIONS, BEFORE STARTING INSTALLATION.

NOTE: CORDLESS ROMAN SHADES COME MOUNTED TO AN ALUMINUM HEAD RAIL. THE SHADE RISES AUTOMATICALLY WITHOUT CORDS BECAUSE OF A SPRING SYSTEM LOCATED INSIDE THE TUBE. THE SPRING IS UNDER TENSION AND THE HEAD RAIL AND BRACKETS MAINTAIN THE TENSION ON THE SPRING. DO NOT REMOVE THE SHADE FROM THE BRACKETS OR THE HEAD RAIL, OR THE SPRING WILL LOSE ALL TENSION AND THE SHADE WILL NOT OPERATE CORRECTLY.

MOUNTING HARDWARE KIT INCLUDES:



Mounting Brackets



Screws

TOOLS THAT MAY BE REQUIRED:

Pencil, Tape Measure, Drill, Screw Driver, Level and Step Stool

INSTALLING YOUR SHADE:

NOTE: For wallboard or plaster, use anchors designed for hollow walls (not included). For concrete, stone and brick, use a masonry drill bit and anchors designed for masonry (not included).

STEP 1: INSTALL BRACKETS

The cordless roller shade must be mounted using the aluminum head rail. The head rail can be mounted either to the wall (face mount) or to the ceiling or underside of the window recess (top mount).

1. Before installing the brackets, check the fit with the top of the head rail. The bracket engages and disengages by pressing in the clear plastic tab at the back. **[Figure 1]**
2. To install the brackets, decide if top- or face-mount is required.
3. Position the brackets at a convenient distance from the end of the head rail and mark the desired bracket locations with a pencil. Make sure the brackets are level and in line with each other, or the head rail may not engage correctly. **[Figure 2 & 3]**
4. Pre-drill mounting holes into the mounting surface and screw the brackets into place. Check that the brackets are level.



Figure 1 – Cordless head rail & bracket

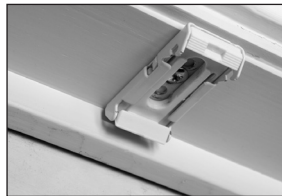


Figure 2– Inside/Top Mount

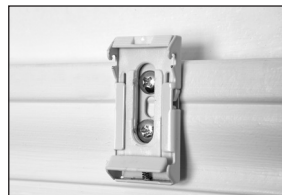


Figure 3 – Outside/Face Mount

STEP 2: INSTALL SHADE

Hold the shade up against the brackets and push in the clear tab on the back of each bracket to allow the head rail to snap into place. **[Figure 4 & 5]**



Figure 4 – Top Mount



Figure 5 – Face Mount

STEP 3: OPERATE THE SHADE

The shade is operated by pulling gently down on the bottom rail to lower the shade. Once the shade is released the brake will engage and make sure that the shade remains at the desired level.

To raise the shade, gently pull down about an inch on the bottom rail so that the brake disengages and the shade rises up automatically.