
“NO HASSLE” LIMITED WARRANTY

For the first five years after date of purchase, should your shade be damaged or fail to operate correctly, Pro Design will provide a no-charge replacement or repair (at Pro Design’s discretion).

This warranty is provided to the original purchaser only with proof of purchase.

If your shade is replaced, there may be variations between the color or texture of the new shade and the old shade.

If your color is no longer available, your replacement will be in the closest available color.

The replacement shade will be made to the same size and specifications as the original shade, unless agreed to beforehand by Pro Design.

This warranty is only available on a one-time basis for your Pro Design shade. After that, or after five years, your shade is covered by our Limited Lifetime Warranty.

LIMITED LIFETIME WARRANTY

WHAT IS COVERED BY THIS WARRANTY?

This product is warranted against defects in materials and workmanship, provided that:

1. The product was installed according to the product instructions.
2. Pro Design recommendations were followed regarding limitations and specifications of the product.

Pro Design reserves the right to determine if your shade warrants a repair or partial replacement of any parts. If necessary, Pro Design will replace your shade with a new shade of equal or superior value. This shall be your sole remedy under this warranty.

WHO IS COVERED BY THIS WARRANTY?

This warranty applies only to the original retail purchaser with proof of purchase.

WHAT IS NOT COVERED BY THIS WARRANTY?

This warranty does not cover the removal or installation of original or replacement shades. This warranty does not cover damage or defects caused by, or resulting from improper maintenance, neglect or improper use, wear and tear, abuse, neglect, accidents, alteration, commercial use, installation, removal or reinstallation or exposure to excessive moisture.

YOUR RIGHTS UNDER STATE LAW

This warranty gives you specific legal rights. You may also have other rights which may vary from state to state. In no event shall Pro Design be liable for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty is exclusive and in lieu of all other obligations, liabilities or warranties.


INSPIRED SHADES™
C O L L E C T I O N

INSTALLATION INSTRUCTIONS

CHAIN AND CLUTCH ROLLER SHADE

THANK YOU FOR PURCHASING YOUR CUSTOM ROLLER SHADES. WITH PROPER INSTALLATION YOUR SHADES SHOULD LOOK BEAUTIFUL AND PROVIDE YEARS OF SERVICE. PLEASE CHECK ALL PARTS AND READ THESE INSTRUCTIONS BEFORE STARTING INSTALLATION.

MOUNTING HARDWARE KIT INCLUDES:

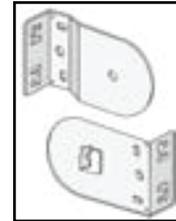

Mounting Brackets



Screws



Chain Tensioner and
Screws

Note: Actual Cord Tensioner supplied may vary.

All bead chain loops should be secured with chain tensioners to prevent the risk of strangulation. Keep chain loops away from children and pets. Plastic chain loops feature a breakaway connector, which also helps to reduce the risk of strangulation.

TOOLS THAT MAY BE REQUIRED:

Pencil, Tape Measure, Drill, Screw Driver, Level and Step Stool

INSTALLING YOUR SHADE:

NOTE: For wallboard or plaster, use anchors designed for hollow walls (not included). For concrete, stone and brick, use a masonry drill bit and anchors designed for masonry (not included).

STEP 1: INSTALL BRACKETS

1. The roller shade has a clutch and chain control on one end and a retractable pin on the other. The idle end bracket has a hole in the center for the pin, and the control end bracket [Figure 1] has a lug that fits into the clutch end.



Figure 1

2. The brackets can be installed to the wall (face mount) or to the ceiling or underside of the window recess (top mount). To top mount the brackets, turn them 90 degrees.

They can also be side-mounted inside the window recess.

3. Determine the desired location for the brackets and how they will be mounted. Mark the position of the brackets and make sure they are the correct distance apart. Also make sure they are level and in line with each other. If they are not level, the roller shade may not fit correctly or it may not roll up straight. This can cause the fabric to rub against the bracket on either side, which will cause fraying of the fabric.

STEP 2: INSTALL SHADE

Hold the shade up and insert the clutch into the clutch end bracket, making sure the lug on the bracket fits into the slot on the clutch. Then push in the spring-loaded pin on the idle end of the shade and move the shade up so that the pin engages with the hole in the idle end bracket. When the pin snaps into the bracket, the shade is securely installed [Figure 2].



Figure 2

STEP 3: INSTALL THE CHAIN TENSIONER

Shades with clutch controls come with a continuous chain loop, which should always be secured to the wall with the included chain tensioner.

1. The chain tensioner should be installed to a flat surface, so the bead chain is taut but not stretched. Be sure not to twist or cross the chain. [Figure 3]

On inside mount shades, the tensioner may be attached to the windowsill or to the inside of the window frame. For outside mount or wall mount shades, the bracket may be mounted to the exterior of the window frame or the wall.



Figure 3

2. With a pencil, mark the desired location of the screw holes for the tensioner and then drill pilot holes. Install the tensioner with the screws, making sure that the tensioner is fully compressed, so that the springs are pushed in and the chain passes smoothly through the guide. [Figure 3]

NOTE: The chain tensioner forms an important safety function by keeping chain loops away from small children. Never operate this shade without a functioning and correctly installed chain tensioner.



Window Blind Cord Can STRANGLE Your Child

- Children can strangle in the loop above the cord bead.
- Children can climb furniture to reach cords.
- Move crib and furniture away.
- Shorten cords to prevent reach.
- Keep cords separate – Twisted or knotted cords can create a loop.
- Keep all cords out of children's reach.

