INSTALLATION MANUAL
OUTDOOR SHADES

Thank you for purchasing Outdoor Shades from the Inspired Shades Collection.

With proper installation, your shades should look beautiful and provide years of service. Please check all parts and review this manual before starting installation.

CONTENTS:

Page 1: Shade Care and Cleaning
Page 1: Weather Resistance
Page 2 - 3: Cassette (crank)
Page 4: Open Roll (crank)
Page 5: Hold Down
Page 8: Shade Warranties

TOOLS THAT MAY BE REQUIRED:

Pencil, Tape Measure, Drill, Screwdriver, Level, and Step Stool

NOTE: For drywall (wallboard) or plaster, use anchors designed for hollow walls (not included). For concrete, stone, and brick, use a masonry drill bit and masonry anchors (not included).

SHADE CARE AND CLEANING

Our outdoor shade fabrics are made from durable PVC/polyester materials designed to stand up to the elements.

If cleaning is required, wipe with a soft cloth or sponge and mild soap mixed with water. Rinse any soap residue thoroughly with clean water and allow the shade to air dry while it is fully lowered. Avoid abrasive brushes, bleach, or strong solvents. These aren't necessary and could damage the finish.

Following these tips will help to extend the life of your shades and ensure that they stay beautiful for years to come!

WEATHER RESISTANCE

Both the shade fabric and components have been tested for wind resistance, ensuring your shade can withstand strong breeze conditions. Shades have a rating of 6 on the Beaufort Scale which means they can withstand a strong breeze of up to 25 MPH with hold downs properly installed. We recommend the shades be rolled up when wind speeds exceed 25 MPH.

Shade damage or failure resulting from inclement weather, including but not limited to excessive wind, storms, or other severe conditions is not covered by product warranty.

Deterioration caused by exposure to coastal salt air or other corrosive environmental factors is not covered under this warranty.

WARNING

STRANGULATION HAZARD — Young children can be strangled by cords. Immediately remove this product if a cord longer than 22 cm or a loop exceeding 44 cm around becomes accessible.

MISE EN GARDE

RISQUE D'ÉTRANGLEMENT — Les enfants en bas âge peuvent s'étrangler avec des cordes. Enlevez immédiatement ce produit si une corde mesurant plus de 22 cm devient accessible ou si le contour d'une boucle de plus de 44 cm devient accessible.

MOUNTING HARDWARE:

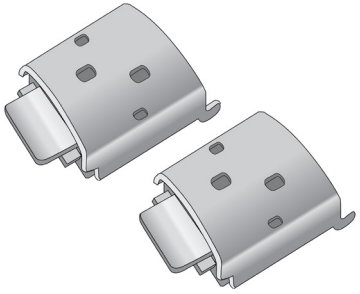

Mounting Brackets
(for top and face mounting)

Ordered Width (Inches)	Brackets Supplied
Up to 36”	2 Brackets
Between 36” and 60”	3 Brackets
Between 60” and 96”	4 Brackets
Between 96” and 110”	5 Brackets

STEP 1: INSTALL BRACKETS

Brackets for crank outdoor shades with cassettes can be installed to the ceiling or underside of the window frame (top mount) or to the wall (face mount).

Top mount shades need the release tab to point toward the front of the cassette and face mount shades need to have the release tab pointed downwards for proper installation.

Note: Brackets must be installed level in order for the cassette to install properly. Brackets install in the center of the cassette and must be positioned 1 5/8” from the back of the cassette for installation.

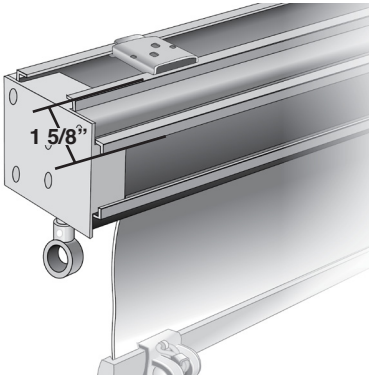

Top Mount

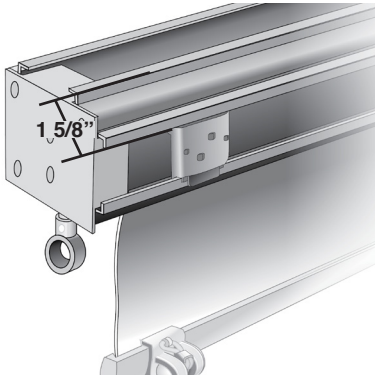

Face Mount

STEP 2: INSTALL SHADE

Position the shade on the brackets as shown below for top mount or face mount

Once in position, push the tab of the installation bracket and tilt the cassette into the bracket. You will hear a click once the back of the cassette and tab of the bracket are engaged.

Once shade is installed, remove protective plastic film from the face of the cassette.

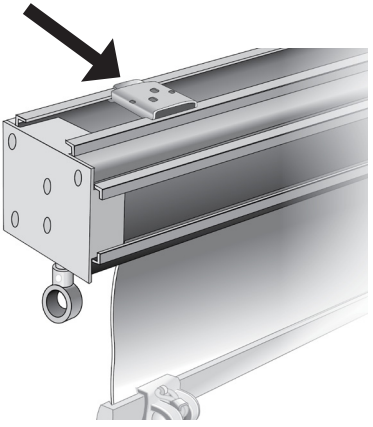

Top Mount

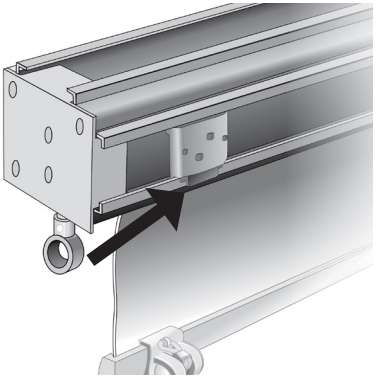

Face Mount

If your shade requires removal after installation, push the bracket tab to release the bracket.

STEP 1: INSTALL BRACKETS

Brackets for open roll outdoor shades can be installed to the ceiling or underside of the window frame (top mount) or to the wall (face mount).

Determine the desired location for the brackets, then mark the position of the brackets ensuring they are the correct distance apart, level, and are in line with each other.

When installing the crank bracket, we recommend using an extension bit. When installing the control side bracket, the screws will install at a slight angle. If possible, remove the crank mechanism from the bracket, install the bracket, and reattach the crank mechanism.

Note: Brackets must be installed level in order for the shade to install properly.

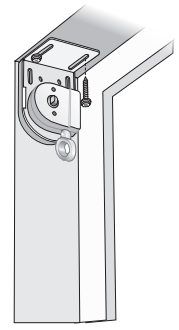

Top Mount

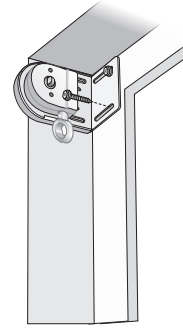

Face Mount

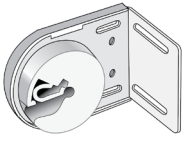

Idle Side

Control Side Top Mount

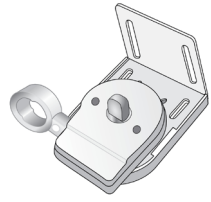

Control Side Face Mount

Note: The control side bracket can be adjusted for face mount or top mount. To change the mount position, simply unscrew the crank mechanism on the control side bracket and reposition in the alternate mounting position.

STEP 2: INSTALL SHADE

Insert the control side of the shade into the control end bracket. Ensure the lug on the bracket fits into the slot.

Then, maneuver the pin on the idle end of the shade into the groove of the idle end bracket. When the pin end snaps into the bracket, the shade is securely installed.

Shade Installed

If your shade requires removal after installation, use a flat head screwdriver to hold the tab of the idle end back and maneuver the idle end out of the bracket.

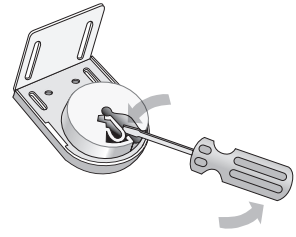

HOLD DOWNS

STEP 1: INSTALL ANCHOR

Hold down anchors can be installed in floor or wall mount applications. Install anchors at the desired position.

STEP 2: POSITION HOLD DOWN CLIP

Hold down clips can be adjusted laterally on the hem bar of the shade. Align the hold down clip with the hold down anchor and use the hold down cord to hold the shade in place.

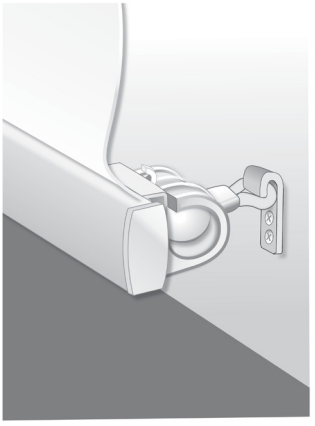

Face Mount

Floor Mount

NOTES

NOTES

INSPIRED SHADES COLLECTION WARRANTIES

Limited No Questions Asked Warranty

The Pro Design LLC Limited “No Questions Asked” Warranty is offered exclusively to Budget Blinds’ customers purchasing products from the Inspired Shades Collections only. This warranty allows a one-time complimentary replacement or repair should a shade become damaged or inoperable after the initial installation.

This warranty is valid for five years from the original date of purchase. Replacement or repair will be at Pro Design LLC’s discretion.

The replacement shade will be made to the same size and specifications as the original shade. The replacement shade must be ordered in the same pattern and color. If the original pattern or color is not available, the shade will be replaced with the closest available option. If a shade is replaced, there may be variations in the color or texture of the original and replaced shades.

This warranty does not cover motors or batteries for motorized shades. This warranty does not cover trip charges or labor charges for removal or installation.

This warranty is provided to the original purchaser only with proof of purchase and does not cover damage caused by removal, storage or reinstallation of the shades. This warranty is only available through Budget Blinds franchisees.

Limited Lifetime Warranty

This product is warranted against defects in materials and workmanship, provided that:

1. The product was installed according to the product instructions.
2. Pro Design LLC recommendations were followed regarding limitations and specifications of the product.

Pro Design LLC reserves the right to determine if your shade warrants a repair or partial replacement of any parts. If necessary, Pro Design LLC will replace your shade with a new shade of equal or superior value. This shall be your sole remedy under this warranty.

This Limited Lifetime Warranty excludes all motors, controls and accessories that are warranted for only a period of five years from the date of purchase. Failure to follow the proper installation, charging and use instructions will invalidate the warranty for motors, remotes, wands and hubs.

This Limited Lifetime Warranty applies only to the original retail purchaser with proof of purchase.

This Limited Lifetime Warranty does not cover the removal or installation of original or replacement shades. This Limited Lifetime Warranty does not cover damage or defects caused by, or resulting from improper maintenance, neglect or improper use, wear and tear, abuse, neglect, accidents, alteration, commercial use, installation, removal or reinstallation or exposure to excessive moisture.

Your Rights Under State Law

These warranties give you specific legal rights. You may also have other rights which may vary from State to State. In no event shall Pro Design LLC be liable for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. These warranties are exclusive and in lieu of all other obligations, liabilities, disclaimers or warranties.

Please contact the Pro Team with any question or concern:

inspired@prodesignllc.net 330-562-0023 330-294-9878